



by Schneider Electric

Alarm Beacon (AP9324) Installation Instructions




WARNING: Do not use this device for any purpose other than product protection and data center monitoring.



Caution: To avoid damage to the beacon, make sure you connect the beacon to a **Beacon** port on a compatible APC product. See your product documentation for details.



Note: You can extend the length of the beacon cable up to 30.5 m (100 ft) using an RJ-45 coupling and standard CAT-5 cabling.

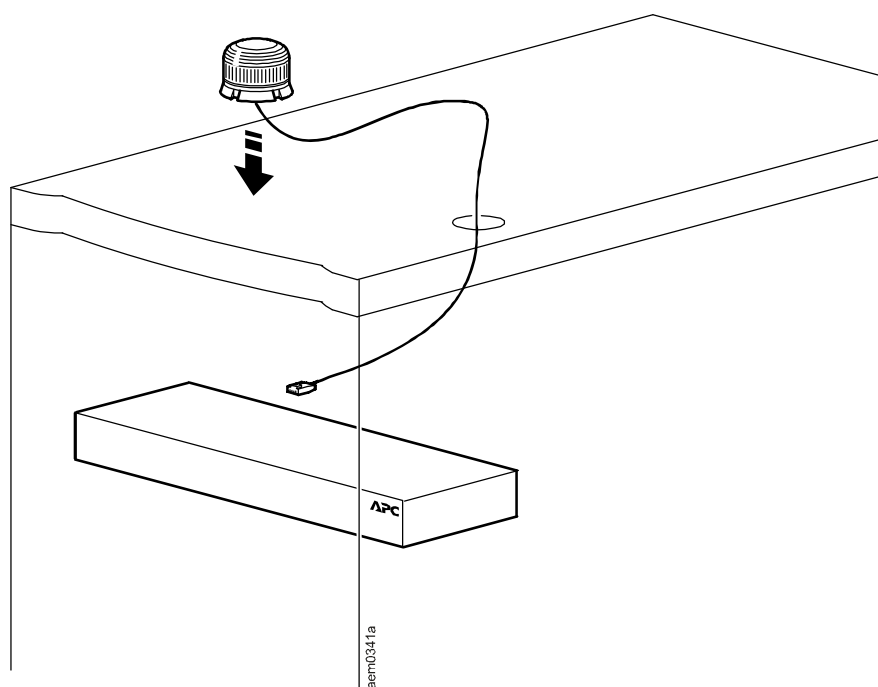

Customer support and warranty information is available at the APC Web site, www.apc.com.

© 2009 American Power Conversion. All rights reserved. All APC trademarks are property of American Power Conversion. Other trademarks are property of their respective owners.

990-1362A
02/2009

